

User's Manual

CITIZEN
DOT MATRIX PRINTER
MODEL CBM-910

Japan CBM Corporation

Declaration of Conformity

Manufacturer's Name : Japan CBM Corporation
 Manufacturer's Address : CBM Bldg.,5-68-10, Nakano, Nakano-ku, Tokyo
 164-0001, Japan

Declare the Product

Product Name : Dot Matrix Printer
 Model Number (s) : CBM-910 Series
 (CBM-910R, CBM-910P)
 (S.NO.0090001 -)

Conform to the following Standards

| | | |
|-------|--------------|--|
| LVD : | EN60950 | :A4:1997 |
| EMC : | EN55022 | :1998 Class A |
| | EN61000-3-2 | :1995+A1:1998+A2:1998 |
| | EN61000-3-3 | :1995 |
| | EN55024 | :1998 |
| | EN61000-4-2 | :1995 ±4KV CD, ±8KV AD |
| | EN61000-4-3 | :1996 3V/m, 80MH-1000MHz AM 1KHz 80% |
| | EN61000-4-4 | :1995 ±1.0KV (AC Mains), ±0.5KV (Signal Lines) |
| | EN61000-4-5 | :1995 ±1KV (Normal mode), ±2KV (Cmmon mode) |
| | EN61000-4-6 | :1996 3V, 0.15MHz-80MHz AM 1KHz 80% |
| | EN61000-4-8 | :1993 50Hz, 1A/m |
| | EN61000-4-11 | :1994 0%, 5000ms/ 70%, 500ms/ 0%, 10ms |

Supplementary Information

"The product complies with the requirements of the Low Voltage Directive 73/23/EEC, 93/68/EEC and the EMC Directive 89/336/EEC, 92/31/EEC, 93/68/EEC"

Place : Tokyo, Japan

Date : September,2000

Signature:



Full Name : Mikio Moriya
 Position : General Manager
 R & D Department

Europe Contact :
 Norco Declaration AB
 Box 7146 S-250 07 Helsingborg, Sweden

This declaration is applied only for 230V model.

IMPORTANT SAFETY INSTRUCTIONS

- * Read all of these instructions and save them for later reference.
- * Follow all warnings and instructions marked on the product.
- * Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- * Do not use this product near water.
- * Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
- * Slots and openings on the cabinet and the back or bottom are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, do not block or cover these openings. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
- * This product should be operated from the type of power source indicated on the marking label. If you're not sure of the type of power available, consult your dealer or local power company.
- * Do not allow anything to rest on the power cord. Do not locate this product where the cord will be walked on.
- * In an extension cord is used with this product, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the wall outlet do not exceed 15 amperes.
- * Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- * Except as explained elsewhere in this manual, don't attempt to service this product by yourself. Opening and removing those covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks. Refer all servicing on those compartments to service personnel.
- * Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance, indicating a need for service.

IMPORTANT:

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his own expense will be required to take whatever measures may be necessary to correct the interference.

CAUTION: Use shielded cable for this equipment.

Sicherheitshinweis

Die Steckdose zum Anschluß dieses Druckers muß nahe dem Gerät angebracht und leicht zugänglich sein.

For Uses in Canada

This digital apparatus does not exceed the class A limits for radio noise emissions from apparatus, as set out in the radio interference regulations of the canadian department of communications.

Pour L'utilisateurs Canadiens

Cet appareil numérique ne dépasse pas limites de catégorie a pour les émissions de bruit radio émanant d'appareils numériques, tel que prévu dans les règlements sur l'interférence radio du département canadien des communications.

CONTENTS

| | |
|---|-----------|
| 1. INTRODUCTION | 1 |
| 1.1 Features..... | 1 |
| 1.2 Accessories | 1 |
| 2. TYPE CLASSIFICATIONS | 2 |
| 2.1 Type | 2 |
| 2.2 AC Adapter | 2 |
| 2.3 Specifications..... | 3 |
| 3. EXTERNAL APPEARANCE AND PART DESCRIPTIONS | 5 |
| 3.1 External Appearance..... | 5 |
| 3.2 Part Descriptions..... | 6 |
| 4. OPERATIONS | 7 |
| 4.1 Connection of the AC adapter..... | 7 |
| 4.2 Setting of the Printer Cover | 8 |
| 4.3 Setting Ribbon Cassettes | 9 |
| 4.4 Setting Paper..... | 10 |
| 4.5 Self-Printing Function..... | 11 |
| 4.6 Paper End. Mechanical Alarm | 12 |
| 4.7 General Remarks..... | 13 |
| 5. PARALLEL INTERFACE..... | 14 |
| 5.1 Specifications..... | 14 |
| 5.2 Connector Pin Assignment | 14 |
| 5.3 Description of Input/ Output Signals | 15 |
| 5.4 Electrical Characteristics | 16 |
| 6. SERIAL INTERFACE | 18 |
| 6.1 Specifications..... | 18 |
| 6.2 Connector Pin Assignment | 19 |
| 6.3 Description of Input / Output signal | 19 |
| 6.4 Electrical Characteristics | 21 |
| 6.5 Error Detection | 22 |
| 7. DIP SWITCH SETTING..... | 23 |
| 7.1 Serial Interface Type | 23 |
| 7.2 Parallel Interface Type | 23 |
| 8. PRINT CONTROL FUNCTION | 24 |
| 8.1 List of Control Codes..... | 24 |
| 8.2 Input Data Format..... | 25 |
| 9. CHARACTER SET | 38 |
| 9.1 U.S.A. Specifications..... | 38 |
| 9.2 Character code Table..... | 39 |
| 10. EXTERNAL DIMENSIONS (in mm) | 41 |

1. INTRODUCTION

The CBM-910 is a dot-impact printer widely usable with various data communication terminals and measurement terminals.

This printer, being extremely compact and equipped with extensive functions, is suitable to a wide range of applications. You are kindly requested to read this manual thoroughly to understand the product prior to actual use.

1.1 Features

1. Compact desk-top dot matrix printer
2. Light weight
3. High speed printing
4. Paper-end detecting function
5. Conformity to RS-232C and Centronics.
6. Low power consumption
7. Low price

1.2 Accessories

The following attachments are included in this set aside from the printer itself. Please confirm.


| | |
|-----------------|-------------|
| Paper roll | (1 roll) |
| Ribbon cassette | (1unit) |
| AC adapter | (1 unit) |
| User's manual | (1 booklet) |

2. TYPE CLASSIFICATIONS

2.1 Type

The product is categorized according to the naming plan indicated below.

| | | | | | |
|---------|----|---|---|-----|---|
| CBM-910 | 24 | P | F | 230 | A |
| | 40 | R | | | |

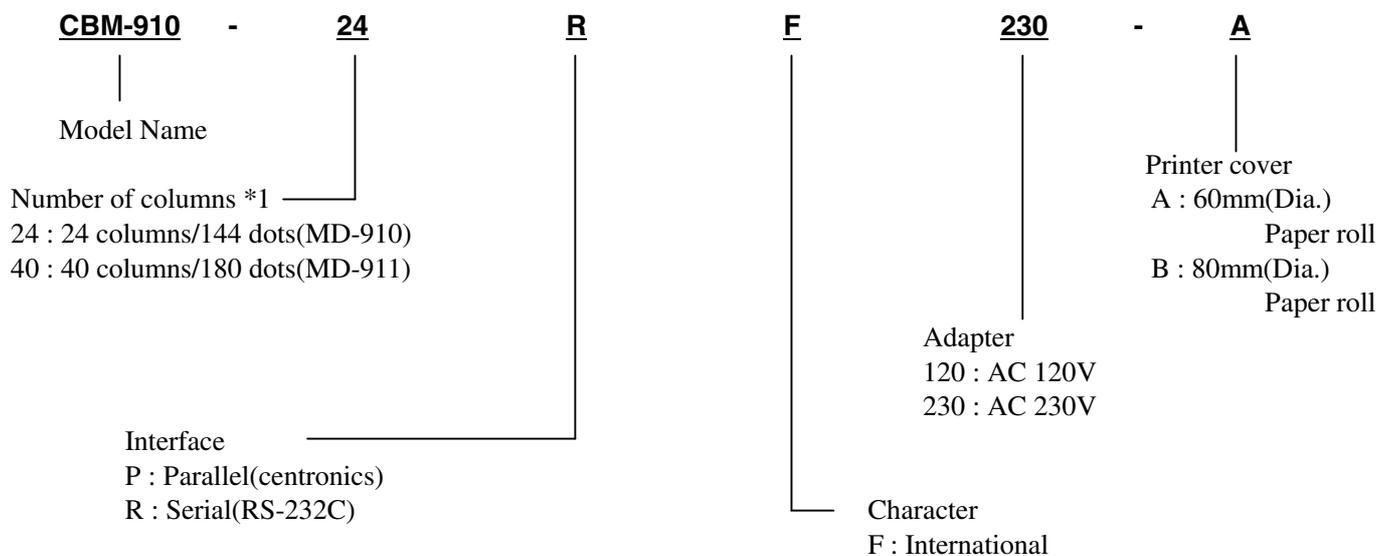

(Note)

*1) No. of digits varies for ROM.

2.2 AC Adapter

Please use the exclusive adapter indicated below.

- 91AD-U (AC 120V)
- 91AD-E (AC 230V)


2.3 Specifications

| Item | | CBM-910-24* | CBM-910-40* |
|------|------------------------------------|---|--------------------------|
| 1 | Printing method | Dot matrix | |
| 2 | Printing direction | One-way printing | |
| 3 | Character configuration (W × H) | (5 + 1) × 8 | (4 + 0.5) × 8 |
| 4 | Number of columns per line | 24 columns: 144 dot/line | 40 columns: 180 dot/line |
| 5 | Printing speed | Approx. 2.5 line/sec. | Approx. 1.8 lines/sec. |
| 6 | Character size (W × H) | 1.62 × 2.4 mm | 1.08 × 2.4 mm |
| 7 | Line pitch | 3.52 mm | |
| 8 | Paper | Paper Roll 57.5 ± 0.5(W) × 60 or 80 (Dia) mm Core ID φ 12 ± 1 mm Core OD φ 18 ± 1mm *1 | |
| 9 | Interface | Parallel Interface (Conformity to Centronics) or Serial Interface (RS-232C) | |
| 10 | Input buffer | 2K bytes | |
| 11 | Paper-end detection | Printing suspended when printing paper gets scarce. | |
| 12 | Ink ribbon | Purple (Private ribbon cassette) Service life: approx. 250,000 letters | |
| 13 | Voltage | DC 7V ± 1V (Printing) Use exclusive adapter (DC 7V, 1.6A) | |
| 14 | Power consumption | Printing : approx. 7VA Stand-by : approx. 0.5VA | |
| 15 | Weight | Approx. 400g | |
| 16 | Reliability | MCBF 1 million lines | MCBF 700,000 lines |
| 17 | Dimension | 106(W) × 180(D) × 88(H) mm | |
| 18 | Operating temp. | 0°C to 40°C | |
| 19 | Storage temp | -20°C to 60°C | |

*1. SPECIAL REMARKS CONCERNING PAPER

SHAPE: The roll end (end part of the inside diameter) should satisfy the following (Refer to Drawing A):

1. Free of fold and well aligned to inside diameter
2. Free of flaps
3. Not adhered to core part (if there is one)

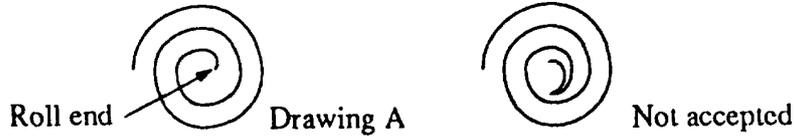

RECOMMENDED PAPER:



Single paper45~55 kg/1,000 sheets/1,092×788 mm/1,000 sheets/

Copy paper.....non-carbon paper/original(34 Kg-paper)+copy 1 sheet (34 Kg-paper)

Total thickness0.13 mm or less

3. EXTERNAL APPEARANCE AND PART DESCRIPTIONS

3.1 External Appearance

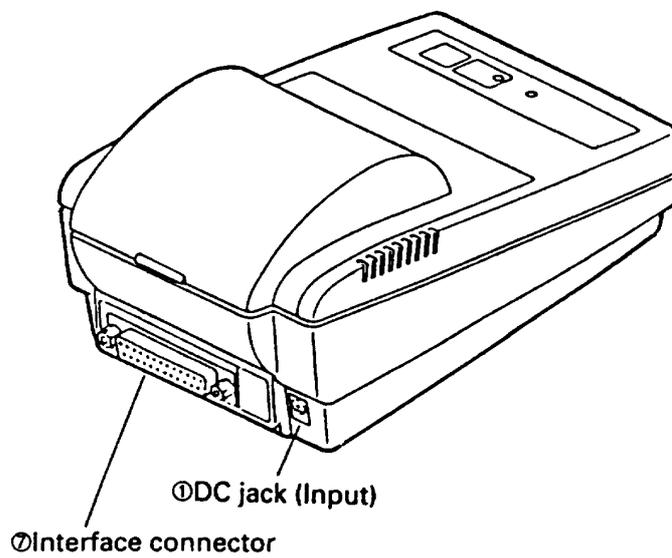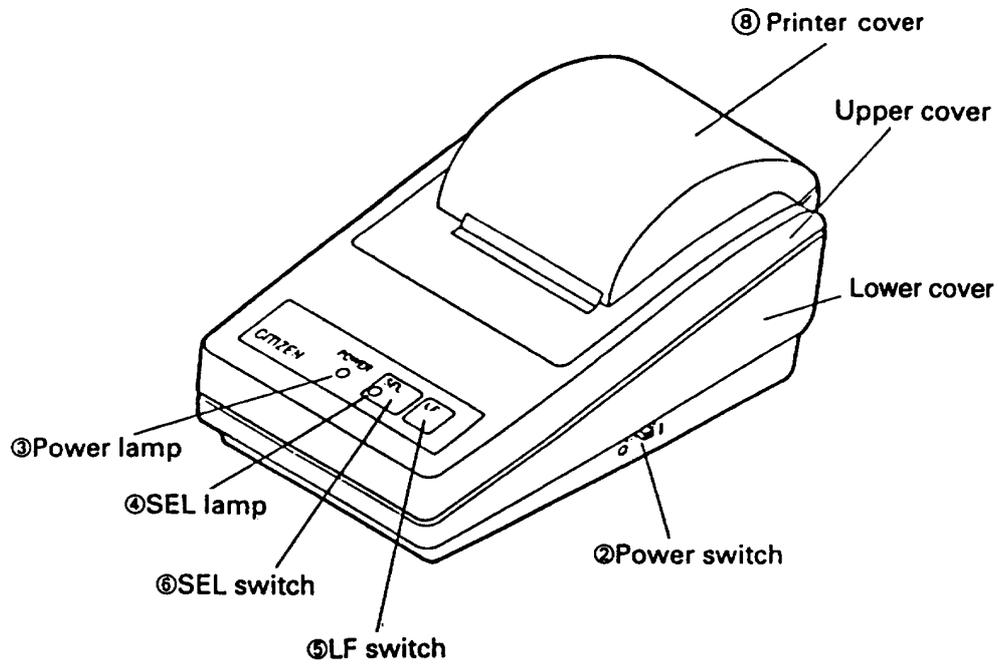

3.2 Part Descriptions

1. DC Jack Insert the output plug of the AC adapter attached.
2. Power Switch When switched ON, power is supplied to the Printer, starting the initializing operation.

3. Power Lamp Lighted when power is turned ON and goes out when turned OFF.

4. SEL Lamp Printer lights up in Select (ON LINE) state, and is put off in Deselect (OFF LINE) state. Printing operation is available only while this lamp is lit.
 - 1) It blinks, for paper end, at 0.5 second intervals. Change paper.
 - 2) On occurrence of any alarm state (blinking) due to any reason other than paper end, it starts to blink at 1/4 second intervals.
Eliminate the cause and either press SEL switch or cut off power for the printer for resumption.

5. LF Switch Paper is fed when switch is pressed (de-select condition only). Used to supply paper or to insert some space in the output.

6. SEL Switch Printer is selected (ON-LINE) by pressing this switch.
Printer is de-selected (OFF-LINE) by pressing the switch again.
Also used to release alarm state. In Deselect state, if data still remain in the input buffer, they are all printed out.


7. Interface Connector Printer is connected to various hosts via cables. Please ensure that both the printer and the host are turned off before connecting.

8. Printer Cover Opened to exchange ribbon cassette and paper roll.

4. OPERATIONS


4.1 Connection of the AC adapter

- (1) Ensure that the power switch is OFF.
- (2) Insert the output plug of the AC adapter into the DC jack of the printer.
- (3) Insert the power plug of the AC adapter into a power outlet supplying the designated voltage.
(Be sure to use an AC adapter for the power source.)

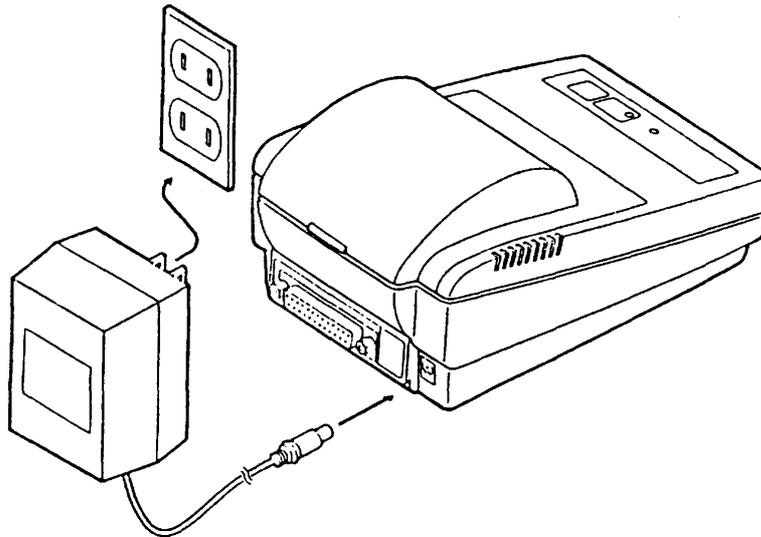


4.2 Setting of the Printer Cover

- (1) Hold the protruding section at the rear of the printer cover and lift in the direction indicated.
- (2) Attach the cover by pressing downward after hooking the cover to the acceptor located in the front part.

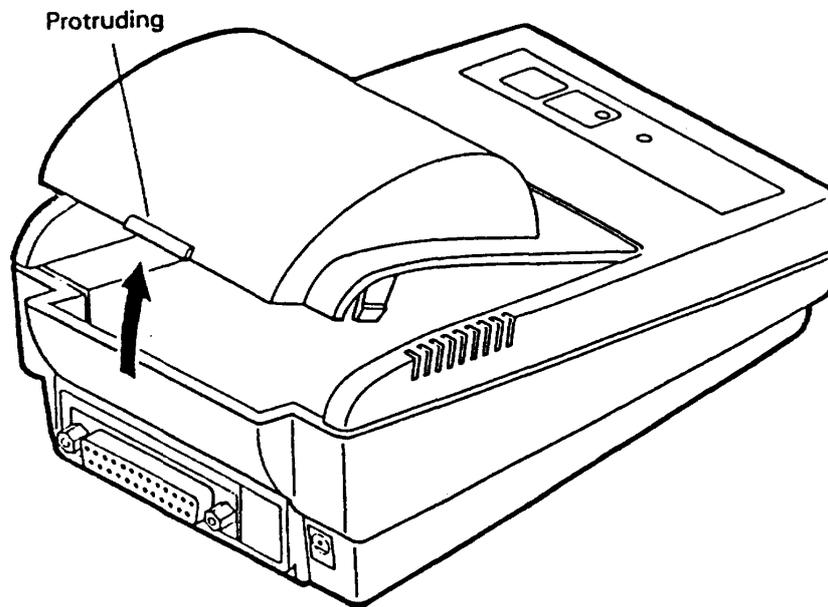


4.3 Setting Ribbon Cassettes

- (1) Remove the printer cover turning OFF the printer.
- (2) Press down on the Ribbon cassette while inserting the ribbon between the printing head and the platen.
- (3) Wind up the ribbon slack by turning the knob in the direction of the arrow.

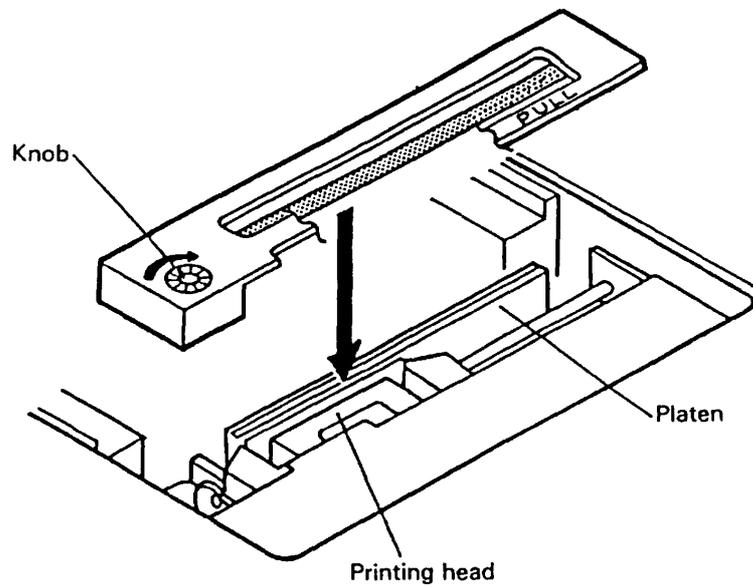


4.4 Setting Paper

- (1) Remove the printer cover.
- (2) Ensure that the end of the paper is straight or incline as indicated in the diagram.
- (3) Insert printing paper with the paper holder turned down in the arrow-indicated direction, hold the core.
- (4) Insert paper into the slot of the printer mechanism.
- (5) Following turning-on of the power switch, as pressing the LF switch, take out printing paper by 5 to 6 cm from the printer mechanism. As passing the paper through paper outlet, mount the printer cover.

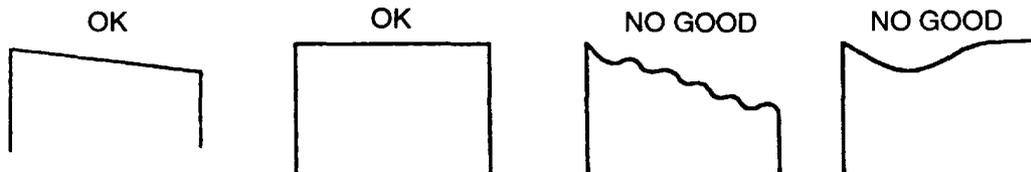

(NOTE)

Paper, if held aslant at the paper feed or the paper discharge side, may cause paper jamming. On occurrence of the above, immediately cut off power and slowly pull out remaining paper upright.

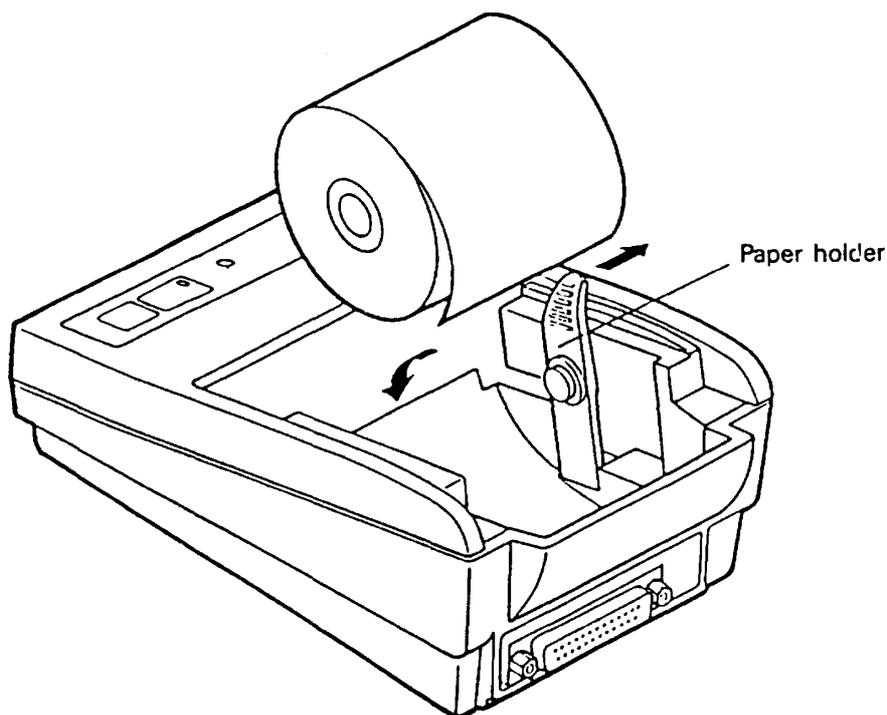

4.5 Self-Printing Function

(1) Test printing

With power supplied as LF switch being press down, all characters available for use are printed out. SEL lamp is held off during this stage, where BUSY signal is output. On completion of test printing, normal operation is recovered.

(2) Dip switch information printing

With power supplied as LF/SEL switch is pressed, the dip switch/communication method (including set details for serial) are printed.

At this point, SEL lamp is held off where BUSY signals are output.

Only with a 40-column type printer, following printing of dip switch information, printing is available in on-line in hexadecimal dump mode.

(3) Hexadecimal dump mode

All data sent from the host computer are printed in hexadecimal codes.

When data for the last line are not sufficient for full one line, data of the last line are printed out with SEL switch being pressed and deselected (OFF LINE).

This mode lasts till power is cut off.

Example of Printing in Dump Mode

| | | | | | | | | |
|-----|-----|-----|-----|-----|-----|-----|-----|-----------------|
| 3 1 | 3 2 | 3 3 | 3 4 | 3 5 | 3 6 | 3 7 | 3 8 | 1 2 3 4 5 6 7 8 |
| 3 9 | 3 A | 3 B | 3 C | 3 D | 3 E | 3 F | 4 0 | 9 : ; < = > ? @ |
| 4 1 | 4 2 | 4 3 | 4 4 | 4 5 | 4 6 | 4 7 | 4 8 | A B C D E F G H |
| 4 9 | 4 A | 4 B | 4 C | 4 D | 4 E | 4 F | 5 0 | I J K L M N O P |
| 5 1 | 5 2 | 5 3 | 5 4 | 5 5 | 5 6 | 5 7 | 5 8 | Q R S T U V W X |

4.6 Paper End. Mechanical Alarm

(1) Paper end

Printing paper shortage is detected and informed with SEL lamp blinking at 0.5 second intervals, where printing is suspended. At this time, power supply to the motor and printing solenoid is stopped with BUSY signals output in the host computer.

To recover from Paper End state, set new paper and press SEL switch twice. LF functions normally.

By pressing SEL switch twice, you can print, without changing paper, data for one-line input buffer on the remaining page.

(2) Mechanical alarm

On occurrence of locked motor, any kind of trouble in the mechanism is suspected. Power supply to the motor and printing solenoid is stopped and BUSY signals are output in the host computer. SEL lamp is then blinked at 1/4 second intervals. To recover from alarm state, eliminate the trouble cause and press SEL switch twice.

If it is in the course of printing, printing is started at the beginning of the interrupted line. (Content of the input buffer is still held.) However, this does not apply to a case where power has been cut due to a severe trouble.

4.7 General Remarks

- (1) Do not print without ink ribbon properly provided. It may cause damage on the print head.
- (2) Change ink ribbon before it becomes worn-out. Do not supplement ink.
- (3) Be careful not to drop, inside the main body, a clip, a setting pin, or any foreign matter. It will lead to machine failure.
- (4) To operate the printer, hold it on a flat stable table. If it not being flat or stable, the main body will be displaced by vibrations while in printing, creating possible danger. Fixing it steadily is also important to avoid erroneous operation.
- (5) To clean the surface of the printer main body, never use organic solvent (alcohol / thinner / benzine, etc.)
- (6) Paper, if left for long hours with a ribbon cassette mounted. Also, continuous printing, if conducted at a low temperature, may cause thin printing due to ink features.
- (7) Ribbon cassette, upon shipment, should not be mounted on a printer

5. PARALLEL INTERFACE

5.1 Specifications

- (1) Data input system : 8 bit parallel (DATA 1-8)
- (2) Control signal : ACK, STB, BUSY, RESET,
- (3) Compatible Connector : Printer side : 57LE-40360 (AMPHENOL or equivalent)
Cable side : 57-30360 (AMPHENOL or equivalent)

5.2 Connector Pin Assignment

| PIN | SIGNAL NAME | PIN | SIGNAL NAME |
|-----|-------------|-----|------------------|
| 1 | STB | 19 | TWISTED PAIR GND |
| 2 | DATA 1 | 20 | TWISTED PAIR GND |
| 3 | DATA 2 | 21 | TWISTED PAIR GND |
| 4 | DATA 3 | 22 | TWISTED PAIR GND |
| 5 | DATA 4 | 23 | TWISTED PAIR GND |
| 6 | DATA 5 | 24 | TWISTED PAIR GND |
| 7 | DATA 6 | 25 | TWISTED PAIR GND |
| 8 | DATA 7 | 26 | TWISTED PAIR GND |
| 9 | DATA 8 | 27 | TWISTED PAIR GND |
| 10 | ACK | 28 | TWISTED PAIR GND |
| 11 | BUSY | 29 | TWISTED PAIR GND |
| 12 | GND | 30 | TWISTED PAIR GND |
| 13 | HI-LEVEL | 31 | RESET |
| 14 | GND | 32 | |
| 15 | | 33 | GND |
| 16 | GND | 34 | |
| 17 | FRAME GND | 35 | |
| 18 | | 36 | |

The diagram shows a 36-pin connector with two rows of 18 pins each. The top row is numbered 19 to 36 from left to right. The bottom row is numbered 1 to 18 from left to right. Each pin is represented by a small circle.

5.3 Description of Input/ Output Signals


(1) Input signal

- * DATA 1.....8 bit parallel signal (positive logic)
- * DATA 2.....8 bit parallel signal (positive logic)
- * DATA 3.....8 bit parallel signal (positive logic)
- * DATA 4.....8 bit parallel signal (positive logic)
- * DATA 5.....8 bit parallel signal (positive logic)
- * DATA 6.....8 bit parallel signal (positive logic)
- * DATA 7.....8 bit parallel signal (positive logic)
- * DATA 8.....8 bit parallel signal (positive logic)
- * $\overline{\text{STB}}$Strobe signal for reading out data (negative logic)
- * $\overline{\text{RESET}}$Signal for resetting the entire unit (negative logic 4ms or more)

(2) Output signal

- * $\overline{\text{ACK}}$8 bit data signal for requesting data. ACK is issued at the end of the BUSY signal (negative logic)
- * BUSY.....Signal indicating the printer is busy. Input new data when the signal is in "LOW" condition.
(positive logic)
- * HI-LEVEL.....Connected to Vcc via 3.3 kΩ resistance.


(3) Timing chart

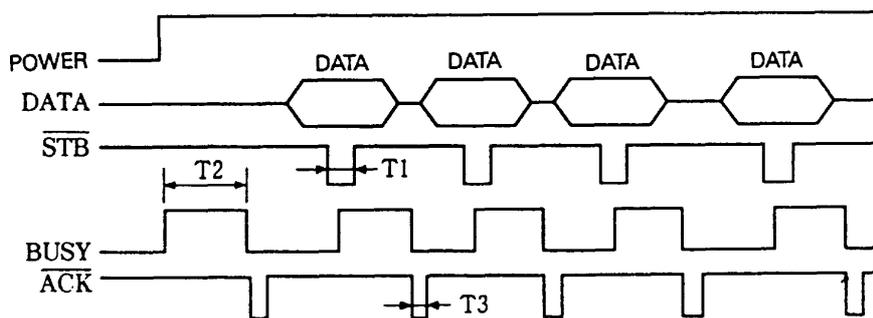

| | |
|----|------------------------------------|
| T1 | 2.7μs MIN |
| T2 | 500mS MIN (When power is supplied) |
| T3 | 10μs TYP |

OUTPUT SIGNAL

$\overline{\text{ACK}}$
 BUSY

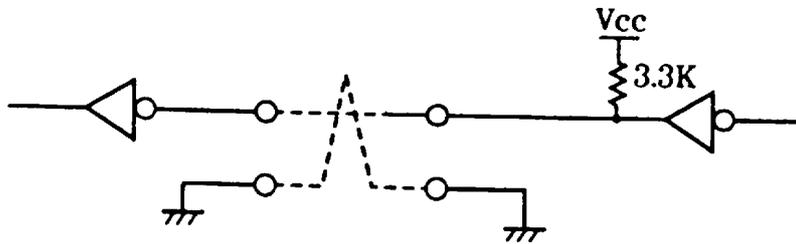

(7407 or equivalent)


6. SERIAL INTERFACE

6.1 Specifications

- (1) Synchronization : Asynchronous
- (2) Baud rate : 1200, 2400, 4800, 9600 Baud/sec (User selection)
- (3) Word configuration
 - Start bit : 1 bit
 - Data bit : 7 bit or 8 bit (User selection)
 - Parity bit : odd, even, no parity (User selection)
 - Stop bit : 1 bit or more
- (4) Signal polarity
 - RS-232C
 - * Mark = Logic "1" (-3 to -12V)
 - * Space = Logic "0" (+3 to +12V)
 - TTL ($\overline{\text{RESET}}$)
 - * H level = Logic "1"
 - * L level = Logic "0"
- (5) Receive Data (RD)
 - * Mark : 1
 - * Space : 0
- (6) Transmit Data (TD)
 - * Mark : 1
 - * Space : 0
- (7) Received control (DTR signal)
 - * Mark : Data transmission not possible
 - * Space : Data transmission possible

6.2 Connector Pin Assignment

| SIGNAL PIN | SIGNAL NAME | SIGNAL DIRECTION HOST-PRINTER | FUNCTION | RS-232C | TTL |
|------------|-------------|-------------------------------|----------------------|---------|-----|
| 1 | FG | | Frame ground | ○ | |
| 7 | GND | | Signal ground | ○ | |
| 2 | TD | ← | Transmit data | ○ | |
| 3 | RD | → | Receive data | ○ | |
| 20 | DTR | ← | Printer BUSY signal | ○ | |
| 23 | RESET | → | Printer reset signal | | ○ |

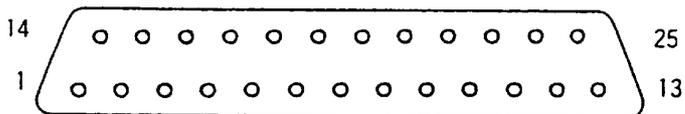


Note: 1. Signals for RS-232C are based on EIA RS-232C level.
 Applicable connector (D-sub connector)
 Printer side : 17LE-13250 (Anphenol equivalent)
 Cable side : 17JE-23250 (Anphenol equivalent)

6.3 Description of Input / Output signal

- (1) Input signal
 - 1) TD (TRANSMIT DATA) Serial transmission data signal.
 - 2) RD (RECEIVE DATA) Serial receive data signal.
 - 3) DTR (DATA TERMINAL READY) Input command or data while this signal is in ready state. Data input while the signal is BUSY will cause an overrun error to occur. Data can be provided to the input buffer even if the printer is printing. Busy state may also occur when power is applied, or during test printing, on-line, or when the printer is reset.
 - 4) RESET Signal resets the entire printer. (More than 4ms.)
 - 5) FG(FRAME GND) Case ground.
 - 6) GND Signal ground for the circuit.

(2) Data configuration

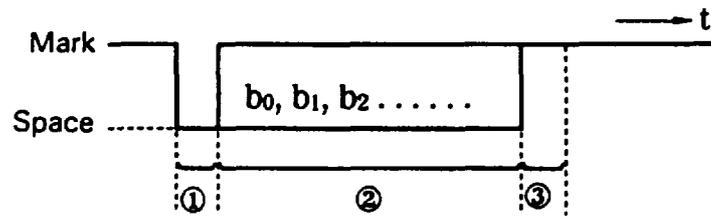


- (1) Start bit (1 bit)
- (2) Data bit (7 or 8 bit)
- (3) Stop bit (more than 1)


6.4 Electrical Characteristics

(1) RS-232C I/O Signals (RD / TD / DTR)

- *Input (RD / TD) Mark = (-8V): stop bit
- Space = (+8V): start bit
- *Output (DTR) Mark = (-8V): for Busy
- Space = (+8V): for Ready

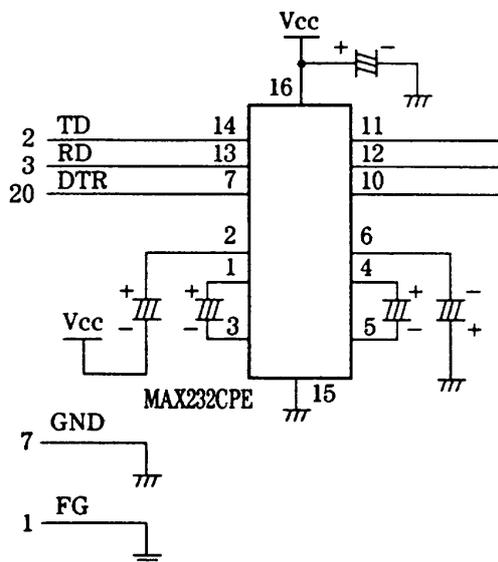

(2) TTL Circuit
Input (RESET)

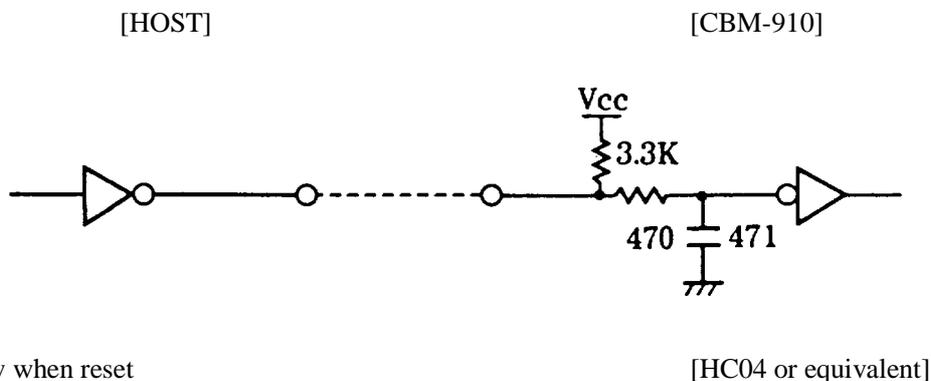

6.5 Error Detection

* Communication error

Parity Error

When parity nonconformity having been detected out of odd-even parity checking conducted when parity check is assigned.

Framing Error

When space state detected on detection of stop bit.

Overrun Error

When next following data having been transferred to receiving buffer register regardless of presence of data in that receiving buffer register.

On occurrence of the above error, convert data at the time of occurrence into 'F' (7FH) to print it out.

RECEIVING CONTROL AND BUFFERING

The CBM-910 controls, on receipt of print data, receiving (DTR Control) in one-word unit.

If the host disregards DTR and carries out data transmission at this time, over-run of receiving data may be resulted.

This state should be avoided on the host's responsibility. (The data discharging type host cannot follow this.)

This is applicable when the host adopts a double buffer type transmitter.

7. DIP SWITCH SETTING

7.1 Serial Interface Type

| Switch No. | Function | OFF | ON | Shipping Setting |
|------------|------------|----------------|--------------|------------------|
| 1 | Character | International | - | OFF |
| 2 | CR | CR disregarded | CR + LF | OFF |
| 3 | Bit Length | 8 bits | 7 bits | OFF |
| 4 | Parity | Provided | Not provided | ON |
| 5 | Conditions | Odd | Even | OFF |


Baud Rate (bps) Selection

| Switch No. | 1200 | 2400 | 4800 | 9600 |
|------------|------|------|------|------|
| 6 | OFF | ON | OFF | ON |
| 7 | OFF | OFF | ON | ON |

*Factory setting is 4800 bps.

7.2 Parallel Interface Type

| Switch No. | Function | OFF | ON | Shipping Setting |
|------------|-----------|----------------|---------|------------------|
| 1 | Character | International | - | OFF |
| 2 | CR | CR disregarded | CR + LF | OFF |

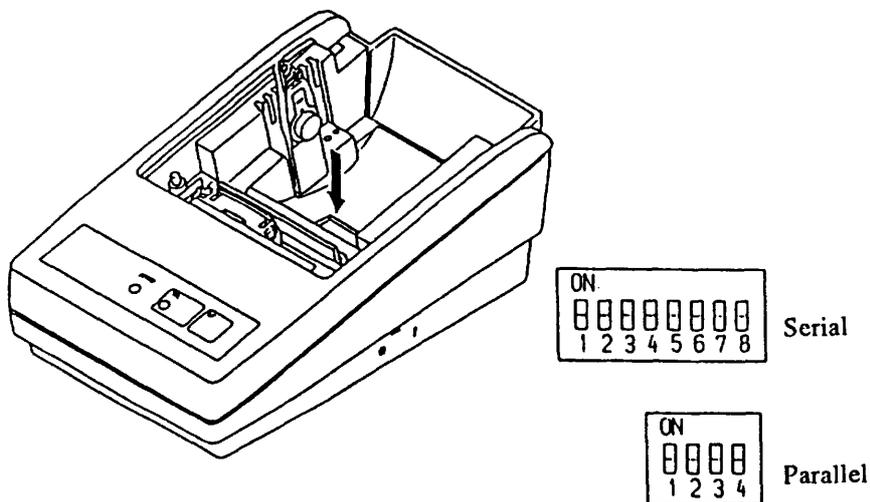

8. PRINT CONTROL FUNCTION

8.1 List of Control Codes

| Symbol | Code (Hexadecimal) | Function |
|--------------|--------------------|--------------------------------------|
| LF | 0A | Line feed performed after printing. |
| CR | 0D | Line feed performed after printing. |
| SI | 0F | Standard letters assigned. |
| SO | 0E | Laterally enlarged letters assigned. |
| US | 1F | Standard letters assigned. |
| RS | 1E | Laterally enlarged letters assigned. |
| CAN | 18 | Data cancelled. |
| DC2 | 12 | Inverted prints assigned. |
| DC1 | 11 | Initial setting. |
| ESC + "B" | 1B/42 | Continuous paper feed assigned. |
| ESC + "R" | 1B/52 | International characters to be set. |
| ESC + "/" | 1B/2F | Sentences registered. |
| ESC + "!" | 1B/21 | Registered sentences printed. |
| ESC + "&" | 1B/26 | Individual patterns registered. |
| ESC + "%" | 1B/25 | Validity of registered letters. |
| ESC + "K" | 1B/4B | Bit image printing. |
| FS + "W" + 1 | 1C/57/1 | × 4 enlarged letters assigned. |
| FS + "W" + 0 | 1C/57/0 | × 4 enlarged letters cancelled. |

8.2 Input Data Format

(1) Command for line feed after printing (CR / LF)

With CR (0DH)/ LF (0AH) codes input, data in the print buffer are printed. Without data in the print buffer, only line feed is performed. This command is disregarded when the buffer is full. CR can be disregarded with the DIP SW.

EX) 24-Column Model:

[Receiving data]

| | | |
|---|----|----|
| 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 | CR | LF |
|---|----|----|

| | | | |
|---|----|----|----|
| 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 | CR | LF | CR |
|---|----|----|----|

| | | | | |
|---|----|----|----|----|
| 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 | CR | LF | CR | LF |
|---|----|----|----|----|

<Result of printing>

1. Dip Switch Setting at CR = CR+LF

1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4

| |
|-----------|
| S P A C E |
|-----------|

1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4

| |
|-----------|
| S P A C E |
|-----------|

| |
|-----------|
| S P A C E |
|-----------|

1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4

| |
|-----------|
| S P A C E |
|-----------|

| |
|-----------|
| S P A C E |
|-----------|

| |
|-----------|
| S P A C E |
|-----------|

Head stop position

2. Dip Switch Setting at CR = disregarded

1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4

1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4

1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4

| |
|-----------|
| S P A C E |
|-----------|

Head stop position

(2) SI / SO and US / RS Commands

SI / SO codes function in the same manner as US / RS as long as 8-bit data are assigned (serial communication data bit length), which, however, are divided, under 7-bit assignment, into SI (20H~7FH characters) print assignment and SO (A0H~FFH characters) print assignment functions.

1. Standard letter assignment (SI / US) command:

With SI (0FH)/ US (1FH) codes input, lateral enlargement is cancelled and the data following are printed in standard letters.

This command can cancel only lateral enlargement, which dose not apply to x 4 enlargement.

2. Laterally enlarged letter assignment (SO / RS) command:

With SO (0EH)/RS (1EH) codes input in any columns, the data following are printed in prints enlarged double in width. With line feeding or SI / SR code input, this command is cancelled.

Although standard and enlarged letters can be mixed within one line, automatic (buffer-full) printing takes place when the number of columns reaches 24 (or 40) counted in standard letters.

[Receiving Data]

| | | |
|----|---------------------|----|
| SO | 1 2 3 4 5 6 7 8 6 0 | CR |
|----|---------------------|----|

| | | | | |
|----|-----|----|------|----|
| SO | 123 | SI | ABCD | CR |
|----|-----|----|------|----|

| | | | | | | |
|----|-----|----|-----|----|----|----|
| SO | 123 | SI | ABC | SO | 12 | CR |
|----|-----|----|-----|----|----|----|

| | | |
|---|----|-------------------------|
| A | SI | 1 2 3 4 5 6 7 8 9 0 1 B |
|---|----|-------------------------|

[Results of Printing]

1 2 3 4 5 6 7 8 9 0

1 2 3 ABCD

1 2 3 ABC 1 2

A 1 2 3 4 5 6 7 8 9 0 1 B

Mixed printing

Although the last letter has been assigned to lateral enlargement, it is printed in standard letter as it is in 24th columns. (For 40-column mechanism this applied to 40th columns.)

(3) Data Cancel (CAN) Command

With CAN (18H) code input, print data held within the line before input of the CAN code are all cancelled.

[Receiving Data]

| | | | | |
|----|--------|-----|-----|----|
| SO | 123456 | CAN | ABC | CR |
|----|--------|-----|-----|----|

[Results of Printing]

A B C * As data "1 2 3 4 5 6" are cancelled without the command "SO" cancelled, "ABC" is printed in lateral enlargement.

(4) Inverted Letter Assignment (DC2) Command

When data are input with DC2 (12H) attached at the beginning of a line (invalid when attached to any other place), data following are all printed in inverted letters.

To cancel this, input either DC2 again or DC1 (initial setting.)

(5) Initial Setting (DC1) Command

With DC1 (11H) input, various conditions set after power supply are cancelled and the state as at supply of power is restored. Content of the input buffer, however, is held unchanged.

(6) Continuous Paper Feed Assignment (ESC + "B" + n) Command

With ESC (1BH) + "B" (42H) + n code input, continuous paper feed at n-dot line is executed.

The n, however, should be a even dot line of $4 \leq n \leq 255$.

An odd number, if assigned to n, is regarded as an even number of "n-1".

If any scope other than the assignable scope has been assigned, this command is cancelled.

With this command input and printing data existing in a input buffer, printing is performed.

The printing line (10-dot line), however, is included in line feed volume "n". With $4 \leq n \leq 9$, inline space is made "0".

(7) International character setting (ESC + "R" + n)

By entering the code ESC (1BH) + "R" (52H) + n, characters input hereafter are set to the characters for the following countries.

n value and country setting

| | | | |
|---|---------|---|---------|
| n | Country | n | Country |
| 0 | U.S. | 5 | Sweden |
| 1 | France | 6 | Italy |
| 2 | Germany | 7 | Spain |
| 3 | England | 8 | Japan |
| 4 | Denmark | | |

With n other than those specified, the set value for the U.S. is assigned.

NOTE)

On supply of power, with the dip switch, U.S. (n=0) are set.

(8) Sentence Registration (ESC + "/" + n) Command

With input of ESC (1BH) + "/" (2FH) + n + 'registered sentence' code, 24 (40)-bytes data following n are registered.

Set a numeral of 1~8 to n. With any other numeral having been set, data following are regarded as normal printing data, where no registration takes place and printing conducted.

When registration has already been made with the numeral set to n, the previous data are cancelled and the sentence newly set is registered.

Data cannot exceed one line which should be ended with CR (0DH) or LF (0AH).

To register sentences exceeding 24 (40) bytes, sentence up to 24 (40) bytes are registered, and the data following are printed out as printed data.

The ESC command cannot be registered.

(9) Registered Sentence Printing (ESC + “!” + n) Command

With ESC (1BH) + “!” (21H) + n code input, sentence already registered in the numeral assigned to n are printed. Assign, to n, a numeral of 1 to 8. With any other numeral having been set, no execution takes place.

NOTE 1)

As much as 24 (40) bytes of data can be registered. In case that 24 (40) columns are exceeded on printing (because of enlarged or x 4 letters having been assigned, etc.), printing is conducted up to 24(40)th column and the columns overflowed are printed in the next line. Be sure to make registration in consideration of printing results.

NOTE 2)

With x 4 enlargement or inverted letters executed at printing, printing continues in that setting unless they are cancelled.

Application Example 1)

[Receiving Data]

| | | | | |
|-----|---|---|---------------|----|
| ESC | / | 1 | This is a pen | CR |
|-----|---|---|---------------|----|

Sentence registered in 1.

| | | | | |
|-----|---|---|-----------------|----|
| ESC | / | 9 | Is this a pen ? | CR |
|-----|---|---|-----------------|----|

No registration made with 9.

| | | | | |
|-----|---|---|-------------|----|
| ESC | / | 1 | It is a pen | CR |
|-----|---|---|-------------|----|

Overwritten on sentence registered initially in 1.

| | | | |
|-----|---|---|--|
| ESC | ! | 1 | |
|-----|---|---|--|

Printing of sentence registered in 1.

<Registered State>

| | |
|---|--------------------|
| 1 | It is a pen |
| 2 | |
| 3 | |
| 4 | |
| 5 | |
| 6 | |
| 7 | |
| 8 | |

<Printing Result>

| | | |
|-----------------|-------|---|
| Is this a pen ? | ← | Registration with 9 was invalid |
| It is a pen | | Immediately printed because not being within 1~8 scope. |
| | └───┘ | Printed out with ESC + “!” + 1. |

Application Example 2)
[Receiving Data]

| | | | | |
|-----|---|---|---------------|----|
| ESC | / | 1 | This is a pen | CR |
|-----|---|---|---------------|----|

↓ No. of columns has overflowed.

| | | | | |
|-----|---|---|-----------------------------|----|
| ESC | / | 2 | Japan CBM Corporation Micro | CR |
|-----|---|---|-----------------------------|----|

| | | | | | | | |
|-----|---|---|----|---------|----|--------------|----|
| ESC | / | 4 | SO | CITIZEN | SI | NEW PRODUCTS | CR |
|-----|---|---|----|---------|----|--------------|----|

↑ enlargement ↑ canceled

| | |
|-----------------|----|
| Is this a pen ? | CR |
|-----------------|----|

| | | |
|-----|---|---|
| ESC | ! | 4 |
|-----|---|---|

| | | |
|-----|---|---|
| ESC | ! | 1 |
|-----|---|---|

| | | |
|-----|---|---|
| ESC | ! | 2 |
|-----|---|---|

| | |
|--------------------|----|
| Impact dot printer | CR |
|--------------------|----|

<Registered State>

| | | | | |
|---|--------------------------|---------|----|--------------|
| 1 | This is a pen | | | |
| 2 | Japan CBM Corporation Mi | | | |
| 3 | | | | |
| 4 | SO | CITIZEN | SI | NEW PRODUCTS |
| 5 | | | | |
| 6 | | | | |
| 7 | | | | |
| 8 | | | | |

<Printed Result>

| |
|--|
| cro |
| Is this a pen ? CITIZEN NEW PRODU CTS This is a pen Japan CBM Corporation Mi Impact dot printer |

← Directly printed out since overflow has occurred.

Application Example 3)

[Receiving Data]

| | | | | | | | |
|-----|---|---|----|---|---|-----------|----|
| ESC | / | 1 | FS | W | 1 | JAPAN CBM | CR |
|-----|---|---|----|---|---|-----------|----|

Registered in 4 enlarged letters.

| | |
|-----------|----|
| JAPAN CBM | CR |
|-----------|----|

| | | |
|-----|---|---|
| ESC | ! | ! |
|-----|---|---|

| | |
|-----------|----|
| JAPAN CBM | CR |
|-----------|----|

<Registered State>

| | | | | |
|---|----|---|---|-----------|
| 1 | FS | W | 1 | JAPAN CBM |
| 2 | | | | |
| 3 | | | | |
| 4 | | | | |
| 5 | | | | |
| 6 | | | | |
| 7 | | | | |
| 8 | | | | |

<Printed Result>

| |
|--------------------------|
| JAPAN CBM |
| J A P A N C B M |
| J A P A N C B M |

- ← Sentence registered in x 4 enlargement is printed.
- ← Because x 4 enlargement assignment has not been cancelled, this sentence is printed still in x 4 enlargement to the request of printing without setting.

(10) Character registration (ESC + "&") command

1. For 24-column model (ESC + "&" + A1 + A2)

Individual patterns can be registered by entering the code ESC + & + A1 + A2, then entering the pattern data.

A maximum of 8 characters can be registered, and any address in the range of 20H to FFH can be used for the registration. However, if a new pattern is registered in an address already in use, existing data is cleared and the newly entered data becomes valid. If more than 8 characters are registered, all existing character registration is cleared.

[Address setting]

Specified address is matched to the character code and can be accessed likewise to the stored fixed character record.

If a fixed character is defined in the specified address, the fixed character becomes invalid. A1 signifies the starting address for the registrations A2 is the ending address.

[Method of data transmission]

d-1 Single character registration

Select the address to be defined (character code) from among 20H to FFH and designate it as A1. When registering a single character, starting and ending addresses match each other. That is, A1=A2.

<Example>

A6 × 6 dot matrix full dot pattern is to be registered in address 41H (code for the fixed character "A"). (Numerals are hexadecimal.)

ESC + "&" + A1 + A2 + "Pattern data (6 byte)"

1B 26 41 41 FF•FF•FF•FF•FF•FF

In the successive controls, a 6 × 8 dot matrix full dot is output whenever the character code 41H is specified. (Character "A" cannot be accessed.)

d-2 Multiple character registration

By repeating the single character registration, a maximum of 8 characters can be registered. When defining multiple characters in a successive address (character code), register pattern data for a maximum of 8 characters by designation A1 as the starting address and A2 as the ending address.

Note)


A1 < A2, A2 - A1 ≤ 7

[Pattern Data Configuration](For 24-Column Model)

Pattern data to be registered must consist of 6 bytes per character.

That is, pattern data configured by a 6 × 8 dot matrix is broken up into 6 vertically positioned units each of which is represented by 1 byte of data. All together, 6 bytes of data are transmitted.

<Example> When transmitting the following data.

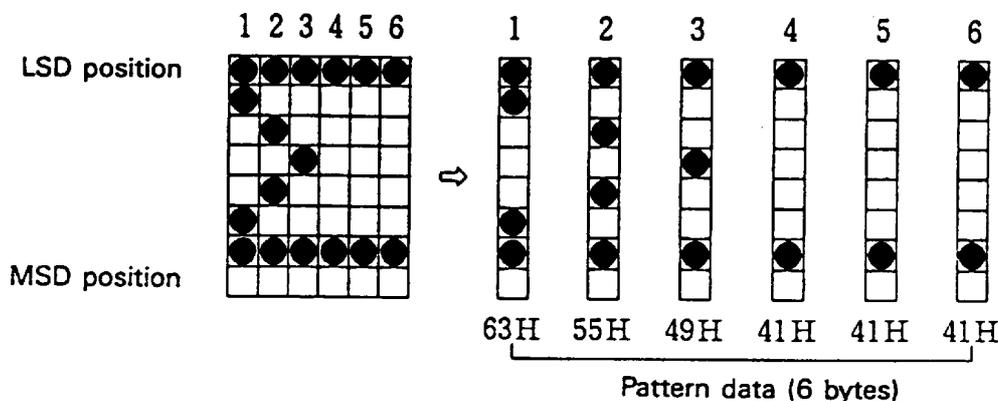

[Printing of Registered Letters]

To print registered character, in the same manner as printing other fixed characters, use the commands (CR, LF, ESC + “B” + n).

2. For 40-Column Model (ESC + “&” + C1 + A1 + A2)

With ESC (1BH) + “&” (26H) + C1 + A1 + A2 code and the pattern data following input, a pattern is registered. Total 224 characters are available for registration into addresses of 20H ~ FFH.

When two pattern data have registered in the same address, those initially registered are cleared and the new data alone are made valid.

[Recognition of Use of Uppermost Bit]

For recognition of use or non-use of the uppermost bit by a character to be registered, set data to Parameter C1.

- C1=0 (00H) : Uppermost bit not used.
- Other than C1=0 : Uppermost bit used.

With 0 set to this parameter while the uppermost bit is in use, ×4 enlargement results in incomplete images for which the uppermost part is lacking.

[Setting of Addresses]

- A1 : Registration starting address (20H~FFH)
- A2 : Registration ending address (20H~FFH)


[Pattern Data Configuration](For 40-Column Model)

Pattern data to be registered must consist of 9 bytes per character. That is, pattern data configured by 9×8 dot matrix is broken up into 9 vertically each of which is represented by 1 byte of data.

All together, 9 bytes of data are transmitted.

<Example>

When transmitting the following pattern data :

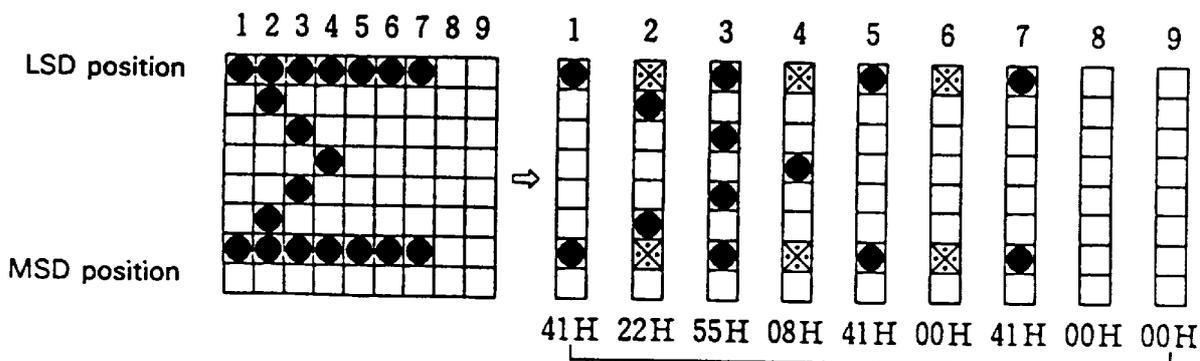

Pattern data (9 bytes)

As the model utilizes the half-dot printing method. It is not capable of positing successive dots in the printing (lateral) direction. Therefore, pattern, even if assigned in the position “⊗” to the right of “●” in the diagram above, will not be registered as pattern data.

NOTE)

With 0 being set in "C1" parameter even if data have been registered in the uppermost position, letter image registered is made incomplete.

(11) Registered Letter Valid / Invalid (ESC + "%" + n) Command

Whether a registered pattern is valid or invalid is set with ESC (1BH) + "%" (26H) + n code being input.

n = 1 (01H) : Registered pattern to be made valid. (Addresses for which no registration change has been conducted are taken as inside fixed characters.)

n = 0 (00H) : Registered pattern to be made invalid. (Taken as in side fixed character sets.)

The initial setting is 0 (inside fixed character).

Even with letters already registered by pattern registration, printing of registered letters cannot be effectuated unless the patterns registered are mode valid with this command.


NOTE)

This command is applicable only to the 40-column printer.

(12) Bit Image Printing (ESC + "K" + n1 + n2 + n3) Command

With ESC (1BH) + K (4BH) + n1 + n2 + n3 code being input, conversion from Text mode into Bit Image mode takes place. The n1/n2/n3 assigns amount of transmission of bit image data which follows these. Where, n1 represents the no. of bytes in lateral direction and n2 (lowermost)/n31 (uppermost) represent the no. of dot lines vertical direction.

(Relations Between Data and Print-Out)

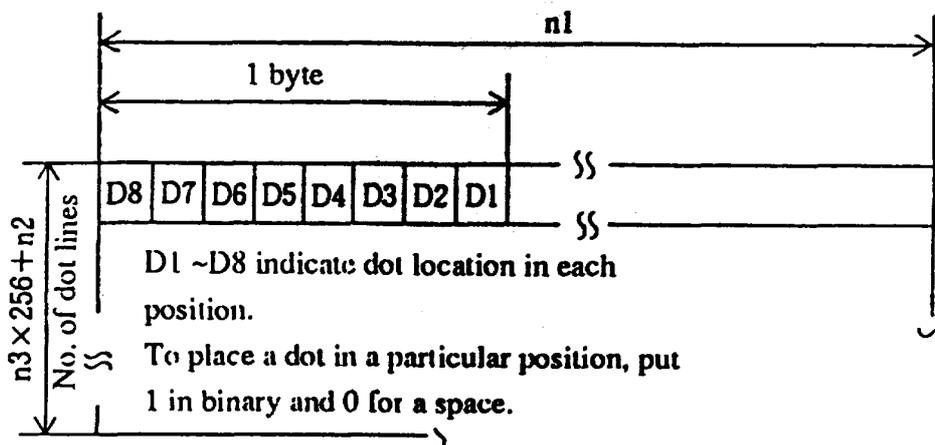

(Parameter Assignable Range)

| Model | n1 | n2 | n3 |
|------------|------|-------|-----|
| 24 columns | 1~18 | 0~255 | 0~1 |
| 40 columns | 1~23 | 0~255 | 0~1 |

In case that assignment has been made out of the assignable range or n2 = n3 = 0 has been assigned, Bit Image mode is cancelled and Text mode starts.

With this printer, on completion of read-in of 4-dot-line data or on completion of n1/ n2/n3 assigning data, lacking data are printed as spaces.

NOTE 1)

With n1 = 23 having been assigned in 40-column Model, 4 dots from the lowermost column (LSB) are made invalid. This is because the printing position in one line equals 180 dots.

NOTE 2)

On termination of bit image printing, Text mode is reinstated.

(13) ×4 Enlarged Letter Assignment (FS + “W” + 1) Command

With FS (1CH) + “W” (57H) + 1 (01H) code input, ×4 enlarged letters are assigned.
Data following this code are printed vertically and laterally twice enlarged.

(14) ×4 Enlargement Cancel (FS + “W” + 0)

With FS (1CH) + “W” (57H) + 0(00H) code being input, ×4 enlargement assignment is cancelled.

NOTE 1)

Although standard and laterally enlarged letters can coexist in one line, automatic (buffer-full) printing takes place on reaching to 24th (40th) column counted in standard characters.

NOTE 2)

With both ×4 enlargement and double-width having been assigned, ×4 enlargement has priority.

Application Example)

[Receiving Data]

| | | | | |
|----|---|---|-----------|----|
| 1C | W | 1 | 123456789 | CR |
|----|---|---|-----------|----|

| | | | | | | | | |
|----|---|---|-----|----|---|---|-----|----|
| 1C | W | 0 | ABC | 1C | W | 1 | 123 | CR |
|----|---|---|-----|----|---|---|-----|----|

| | | | | | | | |
|----|---|---|---|----|---|---|--------------|
| 1C | W | 0 | A | 1C | W | 1 | 12345678901B |
|----|---|---|---|----|---|---|--------------|

<Printing Results>

```

1 2 3 4 5 6 7 8 9
ABC 1 2 3
A 1 2 3 4 5 6 7 8 9 0 1 B

```

↑ The last letter, although in ×4 assignment, is printed in standard letter since it being in the 24th column.
(For 40 column mechanism, this applies to the 40th column.)

9.2 Character code Table

(*1 - *12 in the following code table are placed in the next page under ESC+R+n command.)


| Upper Hex | Lower Hex | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
|--------------|--------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| 0 | 0000 | 0000 | 0001 | 0010 | 0011 | 0100 | 0101 | 0110 | 0111 | 1000 | 1001 | 1010 | 1011 | 1100 | 1101 | 1110 | 1111 |
| | NUL | SP | 0 | 1 | 2 | *3 | P | *8 | p | — | — | € | — | — | — | — | — |
| 1 | 0001 | DC1 | 17 | 33 | 1 | A | Q | a | q | — | T | — | — | — | — | — | — |
| 2 | 0010 | DC2 | 18 | 34 | 2 | B | R | b | r | — | — | — | — | — | — | — | — |
| 3 | 0011 | | 19 | 35 | *1 | C | S | c | s | — | — | — | — | — | — | — | — |
| 4 | 0100 | | 20 | 36 | *2 | D | T | d | t | — | — | — | — | — | — | — | — |
| 5 | 0101 | | 21 | 37 | % | E | U | e | u | — | — | — | — | — | — | — | — |
| 6 | 0110 | | 22 | 38 | & | F | V | f | v | — | — | — | — | — | — | — | — |
| 7 | 0111 | | 23 | 39 | , | G | W | g | w | — | — | — | — | — | — | — | — |
| 8 | 1000 | | 24 | 40 | (| H | X | h | x | — | — | — | — | — | — | — | — |
| 9 | 1001 | | 25 | 41 |) | I | Y | i | y | — | — | — | — | — | — | — | — |
| A | 1010 | LF | 26 | 42 | * | J | Z | j | z | — | — | — | — | — | — | — | — |
| B | 1011 | | 27 | 43 | + | K | *4 | k | *9 | — | — | — | — | — | — | — | — |
| C | 1100 | | 28 | 44 | , | L | *5 | l | *10 | — | — | — | — | — | — | — | — |
| D | 1101 | CR | 29 | 45 | - | M | *6 | m | *11 | — | — | — | — | — | — | — | — |
| E | 1110 | SO | 30 | 46 | . | N | *7 | n | *12 | — | — | — | — | — | — | — | — |
| F | 1111 | SI | 31 | 47 | / | O | — | o | — | + | — | — | — | — | — | — | — |


International Character Set

Character Codes

| | CODE | U.S.A | France | Germany | U.K. | Denmark | Sweden | Italy | Spain |
|------|------|-------|--------|---------|------|---------|--------|-------|-------|
| * 1 | 23H | # | # | # | £ | # | # | # | Pt |
| * 2 | 24H | \$ | \$ | \$ | \$ | \$ | ¤ | \$ | \$ |
| * 3 | 40H | @ | à | § | @ | @ | É | @ | @ |
| * 4 | 5BH | [| ° | Ä | [| Æ | Ä | ° | i |
| * 5 | 5CH | \ | Ç | Ö | \ | Ø | Ö | \ | Ñ |
| * 6 | 5DH |] | § | Ü |] | À | À | é | ì |
| * 7 | 5EH | ^ | ^ | ^ | ^ | ^ | Û | ^ | ^ |
| * 8 | 60H | · | · | · | · | · | é | ù | · |
| * 9 | 7BH | { | é | ä | { | æ | ä | à | ¨ |
| * 10 | 7CH | | ù | ö | | ø | ö | ò | ñ |
| * 11 | 7DH | } | è | ü | } | á | á | è | } |
| * 12 | 7EH | ~ | ¨ | ß | ~ | ~ | ü | ï | ~ |

10. EXTERNAL DIMENSIONS (in mm)

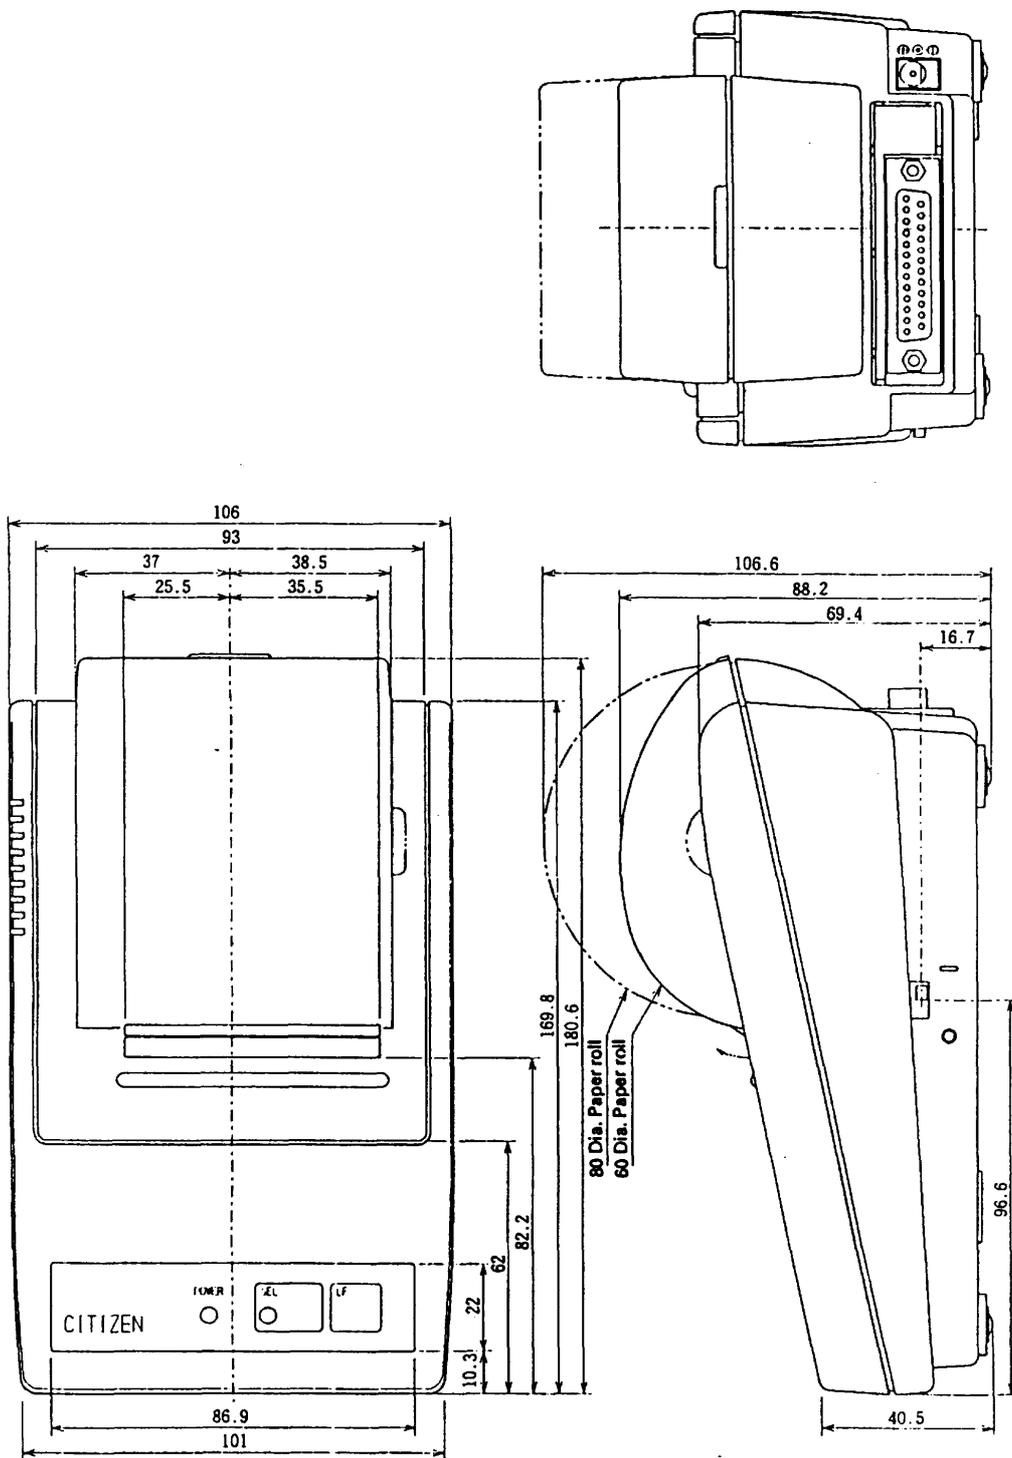

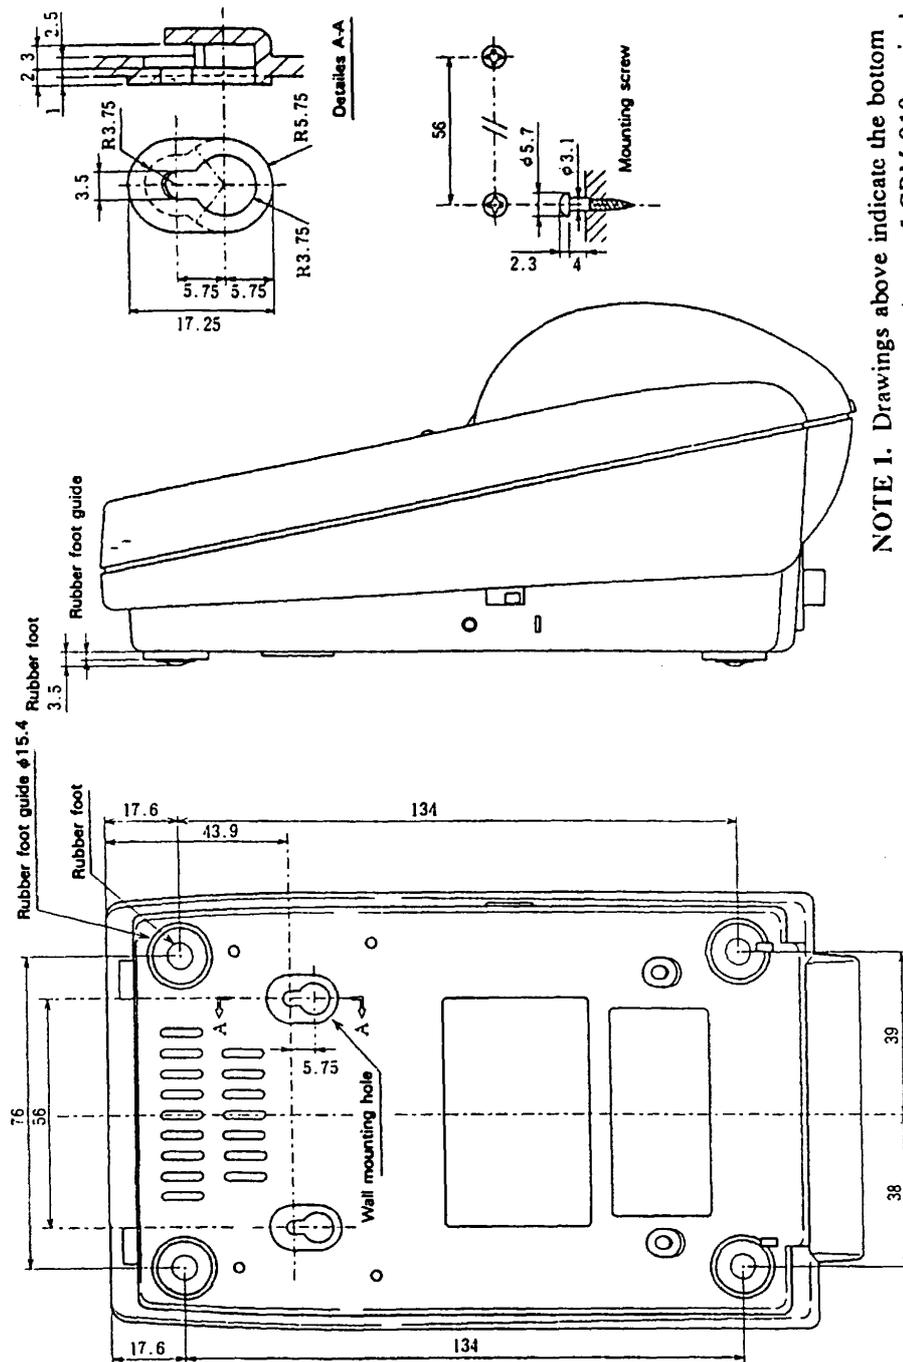

NOTE 1. Drawings above indicate the bottom and side views of CBM-910 main body.

NOTE 2. The wall hanging screw head shall be below 3 mm long.

Japan CBM Corporation

Information Systems Division — CBM Bldg., 5-68-10, Nakano, Nakano-ku, Tokyo 164-0001, Japan
Head Office — Tel: (+81-3) 5345-7540 Fax: (+81-3) 5345-7541